



STEP BY STEP INSTALLATION INSTRUCTIONS

FOR ALL DESIGNER SERIES
KITCHEN WASTE & LAUNDRY UNITS



For further assistance in New Zealand
www.tanova.co.nz or www.fit-nz.co.nz or contact Fit 0800 852 258

For further assistance in Vict, SA & Tas, **contact 1300 121 800**
For further assistance in NSW, QLD, NT, ACT and WA, **contact 1300 222 600**
www.tanova-nz.com

Use in conjunction with full size template supplied with your unit

DESIGNER SERIES INSTALLATION INSTRUCTIONS


USE IN CONJUNCTION WITH THE FULL SIZE TEMPLATE SUPPLIED WITH YOUR UNIT

STEP 1

RUNNER POSITIONS are on each **short** end of the template provided, marked **1 RHF** and **1 LHF**

1. Hold **Template** against the underside of the cabinet top rail and **1 RHF** flush with the right-hand cabinet side, and mark runner fixing positions as shown on template.
2. Repeat on left hand side of cabinet using the **1 LHF** edge of template.
3. **Fix Runners** to cabinet **THROUGH TOP ROW OF HOLES IN RUNNERS** using either 3 x M6 x 11 Euro Screws (Pre-drill with 5mm) or 3 x 6g x 15mm wood screws (Pre-drill with 3mm) per tab minimum.
4. Position **Top Cover** against the top of the cabinet and 3mm back from the front, screw off with the 8g x 15mm Pan screws. **Note:** **Top Cover** only supplied standard with waste systems.
5. Extend runners out the front of cabinet. Slide bin frame onto runners and engage tabs at rear, push bin assembly on firmly until the front connection "Clicks" into place.

Drawer Insertion

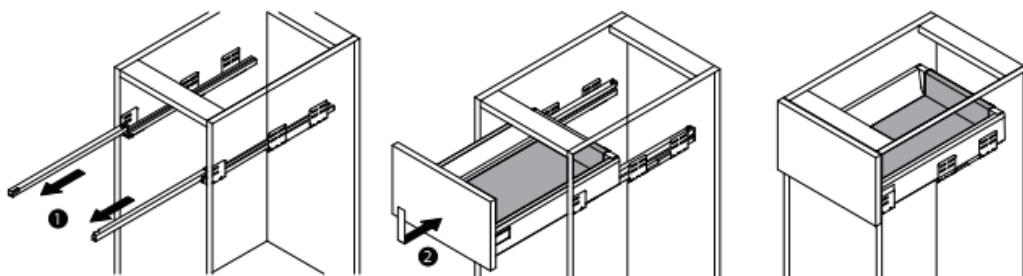

STEP 2


DRAWER FRONT TEMPLATE is on the **long** edge of the template provided, marked **2 Centre Top**.

6. On the back of the drawer front, mark the **Center line** of the drawer front. Measure down from the top of the drawer front the desired amount of **Cabinet overlay**.
7. Align the template center marks with the marked drawer front center line.
8. Move template upwards until flush with overlay position. Mark drawer lower bracket and "F" tilt bracket fixing points and fit drawer to brackets with the 6 x 6g x15mm countersunk screws.
9. Loosen tilt bracket screws slightly and move front into position. Retighten.

NOTE: If you have a **LOWSIDE TDS80** system to suit 800 Cabinet, take notice of the offset LH and RH centerline points,

"Centre TDS80LH" and "Centre TDS80RH"

Drawer Front Assembly & Removal

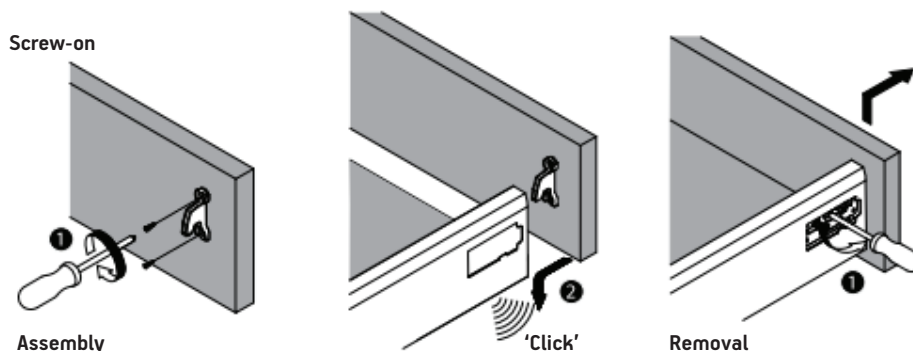


9. Fit drawer front to drawer connector brackets.

STEP 3

10. Loosen lock off screw, access sideways and height adjustment screws through the side of the drawer.


Drawer Front - Side Adjustment

To right

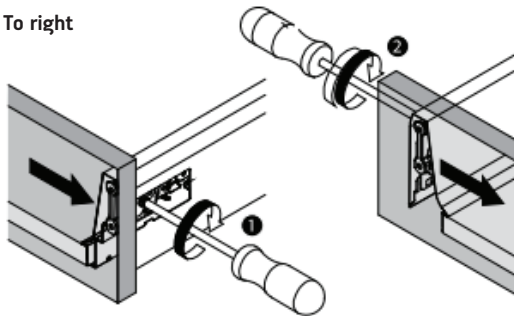




Adjustable by 1.25mm to the right

To left

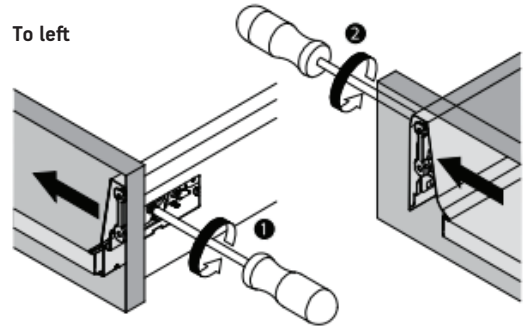

Adjustable by 1.25mm to the left

Drawer Front - Height Adjustment

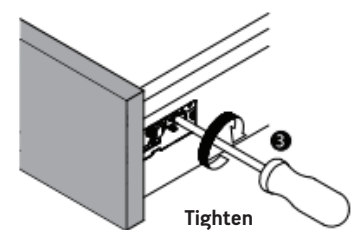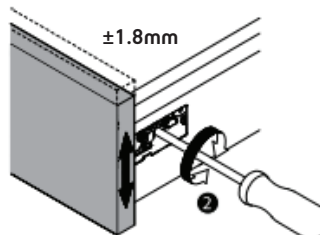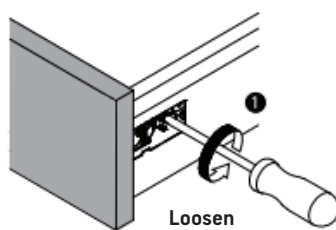

11. Adjust drawer front tilt on the gallery rail thread.

Drawer Front Tilt Adjustment



12. Ensure adjustment lock off screws are tightened.

13. Fit cover cap to drawer side.

14. Insert buckets or laundry hamper to system.

TEMPLATE DIMENSIONS

TANOVA

HIGHSIDE	A	B	C	D	E
TDS30	191mm	308mm	340mm	338mm	96mm
TDS35H	231mm	348mm	380mm	378mm	121mm
TDS40	191mm	308mm	340mm	338mm	146mm
TDS40-C	231mm	348mm	380mm	378mm	146mm

LAUNDRY

TDS35L	113mm	230mm	262mm	259mm	121mm
TDS40L	104mm	221mm	253mm	251mm	146mm
TDS60L	149mm	266mm	298mm	296mm	171mm
TDS45L	104mm	221mm	253mm	251mm	246mm

LOWSIDE

TDS35	79mm	196mm	228mm	226mm	121mm
TDS45-50	79mm	196mm	228mm	226mm	171mm
TDS45	79mm	196mm	228mm	226mm	171mm
TDS60	79mm	196mm	228mm	226mm	246mm
TDS80	79mm	196mm	228mm	226mm	346mm

KEY


- A = Tilt bracket to top
- B = Front connector Top fix to top
- C = Front connector Btm fix to top
- D = RH and LH Runner to top
- E = Centreline to front fix vertical

RUNNER IMAGE WITH DIMENSIONS

450mm

500, 550mm

600, 650mm

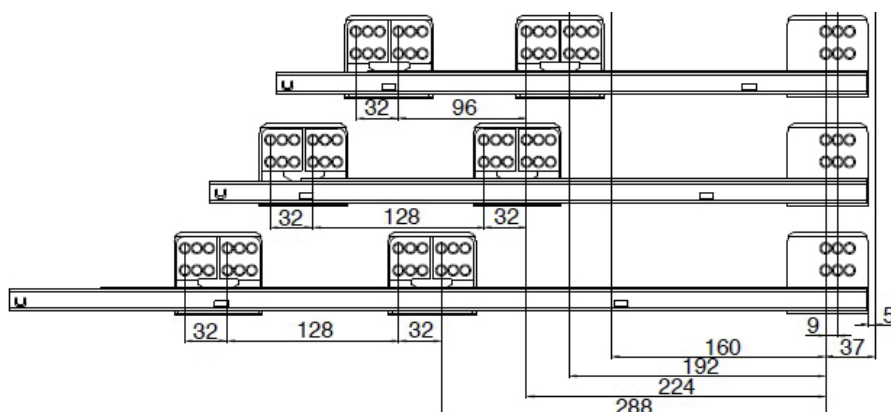

WASTE & LAUNDRY SOLUTIONS BY AVONAT

TDS HIGHSIDE TEMPLATE

KEY

Model	A	B	C	D	E	F
TDS30	191	308	406	338	168.5	96
TDS35H	191	308	406	338	168.5	96
TDS40	191	308	406	338	168.5	96
TDS40-C	231	348	380	378	168.5	941

Drilling Dimensions from underside of Cabinet Top Rail (mm)

Notes:

- A = Front tilt adjustment bracket to top
- B = Front connector Top fix to top
- C = Front connector Btm fix to top
- D = RH and LH Runner to top
- E = Centreline to front fix vertical
- F = Centreline to tilt fixing

Dimensions:

- Overall Width: 224
- Overall Height: 37
- Internal Width: 117
- Internal Height: 32
- Internal Width (Right): 37

Labels:


- TDS40-C
- TDS40
- TDS35H
- TDS30
- TDS40-C
- TDS35H
- TDS30
- TDS40
- TDS40-C
- TDS35H
- TDS30
- TDS40
- TDS40-C
- TDS35H
- TDS30

Orientation:

North Arrow pointing up.

**A FULL SIZE TEMPLATE, SIMILAR TO THE IMAGE SEEN HERE, IS SUPPLIED WITH YOUR UNIT.
THESE INSTRUCTIONS ARE TO BE USED IN CONJUNCTION WITH THAT TEMPLATE.**

TEMPLATE FOR LOW SIDED MODELS

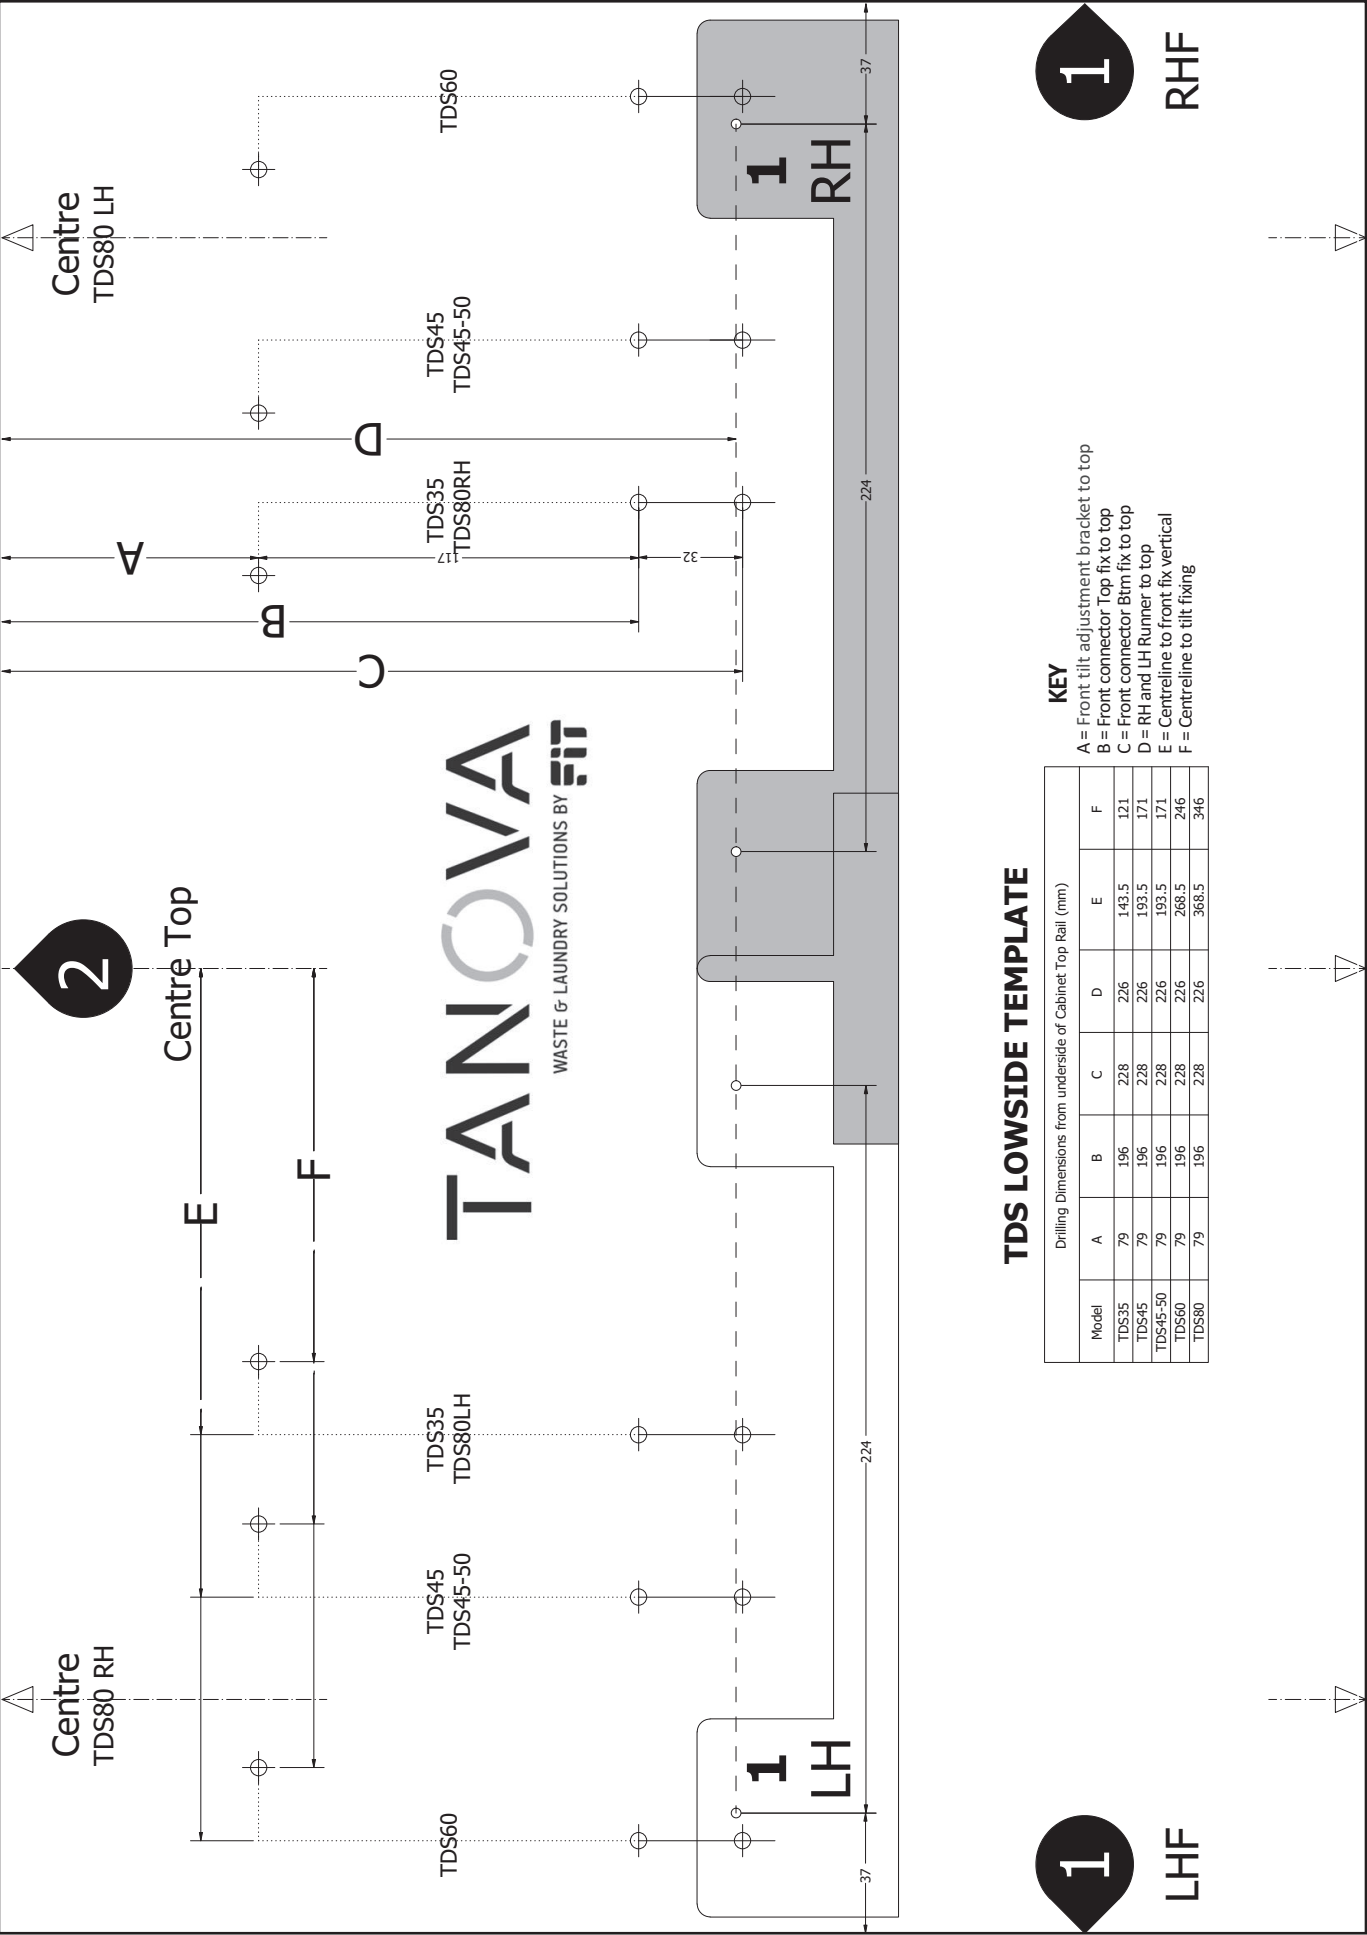

A FULL SIZE TEMPLATE, SIMILAR TO THE IMAGE SEEN HERE, IS SUPPLIED WITH YOUR UNIT.
 THESE INSTRUCTIONS ARE TO BE USED IN CONJUNCTION WITH THAT TEMPLATE.

TDS LAUNDRY TEMPLATE

Drilling Dimensions from underside of Cabinet Top Rail (mm)

Model	A	B	C	D	E	F
TDS35L	113	230	262	259	143.5	121
TDS40L	104	221	253	251	168.5	146
TDS45L	104	221	253	251	193.5	171
TDS60L	149	266	298	296	268.5	246

KEY

- A = Front tilt adjustment bracket to top
- B = Front connector Top fix to top
- C = Front connector 8mm fix to top
- D = RH and LH Runner to top
- E = Centreline to front fix vertical
- F = Centreline to tilt fixing

1 LHF

1 RHF

1 RH

1 LH

1 RH

1 LH

1 RH

1 LH

1 RH

1 LH

1 RH

1 LH

1 RH

1 LH

1 RH

1 LH

1 RH

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2 Centre Top

2

**A FULL SIZE TEMPLATE, SIMILAR TO THE IMAGE SEEN HERE, IS SUPPLIED WITH YOUR UNIT.
THESE INSTRUCTIONS ARE TO BE USED IN CONJUNCTION WITH THAT TEMPLATE.**